

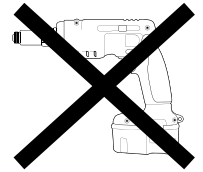
# ASSEMBLY INSTRUCTIONS

## Dining Table




Thank you for purchasing this quality products. Be sure to check all packing material carefully for small parts which have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.

**CAUTIONS:**

- 1- Do not FULLY TIGHTEN the nut or bolt until all nut or bolt is ready assembled.
- 2- Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3- Keep all hardware parts out of reach of children.



NO POWER TOOLS

HARDWARE LIST		
NO.	DESCRIPTION	QTY.
1	JCBC BOLT 70mm 	8
2	FLAT WASHER 	8
3	ALLEN KEY 	1

PART LIST		
NO.	DESCRIPTION	QTY.
A	TABLE TOP	1
B	TABLE LEGS	4

